


ROUND COLUMN WRAPS

INSTALLATION

STEP # 1 Scrape column clean of all debris, usually concrete splatters.

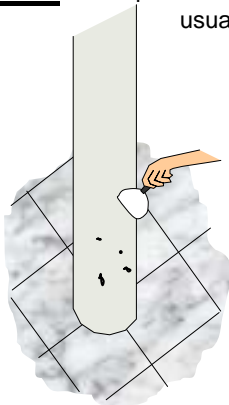


STEP # 2 Find location of seam, should face shelving fixtures, use leather gloves, grab wrap app. 1 ft. from bottom, expand open & slide down on column @ an angle.

warning* s.s. under pressure, position leg so wrap cannot slide out away from column & collapse on your hands.




SLIDE DOWN ON ANGLE AS SHOWN

STEP # 3 Align seam facing shelving, hemmed edge should be exposed as shown, install 1 hose clamp @ app. center of wrap, tighten slightly while aligning seam.


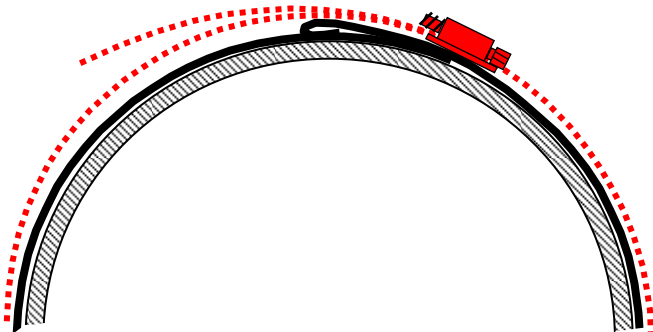


STEP # 4 Install 3 hose clamps, tighten middle first while watching alignment of top seam of wrap, align as required.

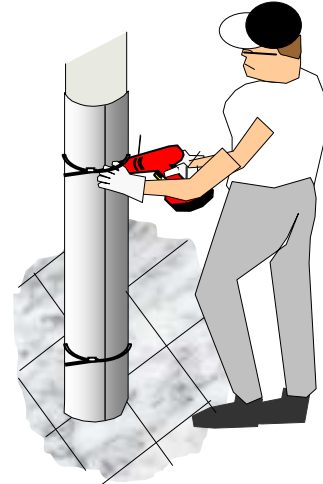

STEP # 5 Mark s.s. wrap as shown, use drill bits provided & drill thru s.s. & tube steel column. After holes completed, remove pvc coating around each hole then rivet.

Eye protection should be worn @ all times.

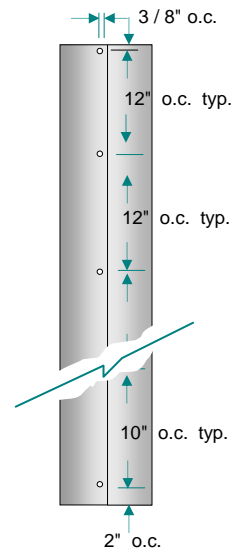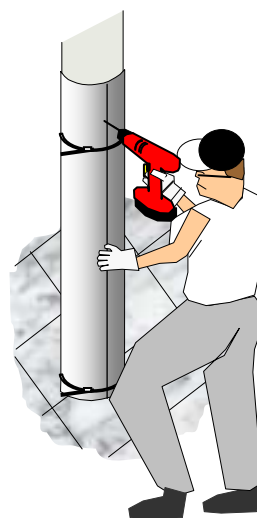

STEP # 6 Remove clamps, cut pvc coating @ seam, peel & caulk.

***CLEAR CAULK** top of wrap.

***GRAY CAULK** bottom of wrap.

NOTE* LEATHER GLOVES & SAFETY GLASSES SHOULD BE WORN @ ALL TIMES DURING INSTALLATION.